


DC-F80 Quick Start Guide

⚠ Important

- *Please activate your warranty: www.MyLumens.com/reg.
- *To download the updated software, multilingual manuals, and Quick Start Guide, please visit Lumens™ website at: <https://www.MyLumens.com/support>.


1. Product Introduction

1.1 Product Overview

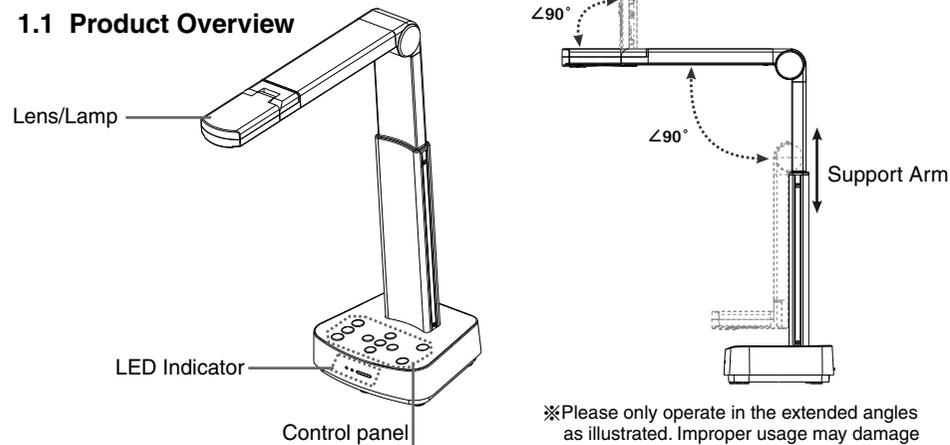


※Please only operate in the extended angles as illustrated. Improper usage may damage the machine.

1.2 I/O Interface

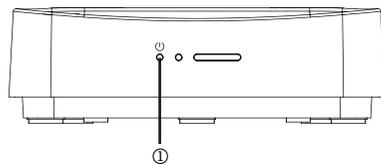


① Power LED Indicator

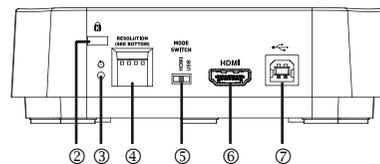


- ② Kensington safety Lock
- ③ Reset Button
- ④ DIP Switch Setting
- ⑤ HDMI/USB mode switch button
- ⑥ HDMI output port
- ⑦ USB Type-B port

2. Installation and Connections

▼ Connect to a projector, monitor or TV(HDTV)


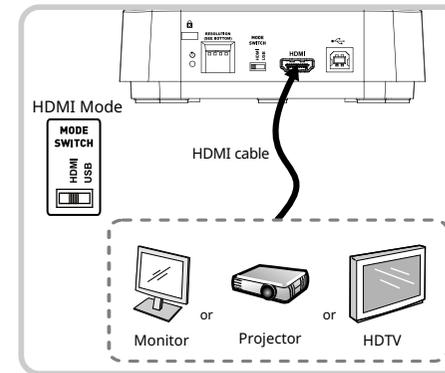


▼ Connecting to a computer and use Lumens™ software

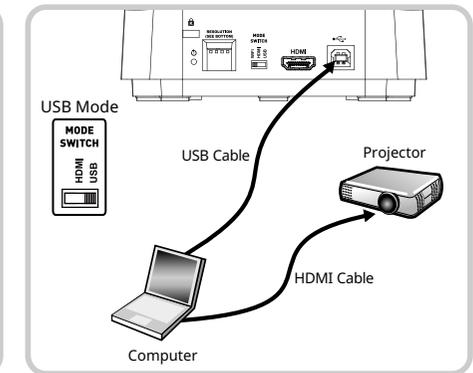

* Please download the relevant software from Lumens website.

3. Start Using

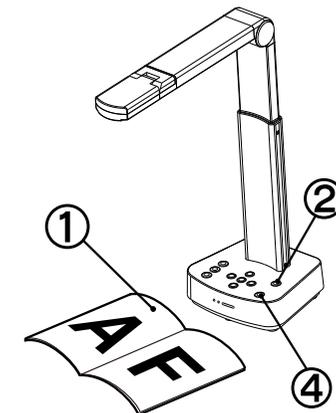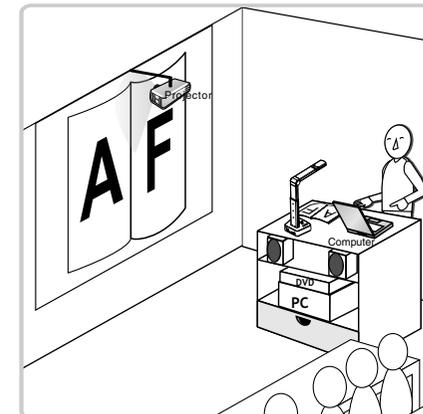

- ① Place an object to be displayed under the camera.
- ② Turn on the power.
- ③ Adjust the support arm and lens to the appropriate positions.
- ④ Press [AUTO TUNE] button to optimize the image.
- ⑤ You are ready to teach/present.